



Vestil Manufacturing Corp.
 2999 North Wayne Street, P.O. Box 507, Angola, IN 46703
 Telephone: (260) 665-7586 -or- Toll Free (800) 348-0868
 Fax: (260) 665-1339
 www.vestilmfg.com e-mail: info@vestil.com

PAL Series Pallet Pullers Instruction Manual

NOTE: PAL-series pallet pullers are NOT below-the-hook lifting devices! DO NOT use these products for any other purpose than to pull pallets and skids across smooth surfaces.



PAL-12



PAL-LP



PAL-16

Receiving instructions:

After delivery, remove the packaging from the product. Inspect the product closely to determine whether it sustained damage during transport. If damage is discovered, record a complete description of it on the bill of lading. If the product is undamaged, discard the packaging.

NOTE:

The end-user is solely responsible for confirming that product design, installation, use, and maintenance comply with laws, regulations, codes, and mandatory standards applied where the product is used.

Table of Contents

Product specifications.....	2
Safety Principles.....	2
Safety Considerations.....	2
Use instructions.....	2
Diagram of Components.....	3
Inspections and Maintenance	3
Label placement diagram.....	4
Limited Warranty.....	5


Product specifications


The standard GR-series system is NOT designed for installation on public streets or highways. [Guard rail systems that comply with Department of Transportation requirements are available as special orders.] Rail-mounting hardware is included with each post. Concrete anchor kits are sold separately. Dimensions and other product specifications appear in the following table:


Model	Description	Pulling capacity	Jaw height	Jaw opening	Net weight
PAL-12	Single scissor	5,000 lb.	2 ³ / ₄ "	7"	14 lb.
PAL-16	Single Scissor (heavy duty)	6,000 lb.	2"	5"	16 lb.
PAL-LP	Double Scissor (low profile)	5,000 lb.	2in. (~5cm)	3 ¹ / ₄ in. (~8.3cm)	24lb. (10.9cm)


Safety Principles:

This manual uses SIGNAL WORDS to classify personal injury risks and situations that might lead to property damage, as well as to draw attention to safety messages. Signal words also indicate the seriousness of the injury that might result from specified actions. Definitions appear below.

 **DANGER** Identifies a hazardous situation which, if not avoided, WILL result in DEATH or SERIOUS INJURY. Use of this signal word is limited to the most extreme situations.


 **WARNING** Identifies a hazardous situation which, if not avoided, COULD result in DEATH or SERIOUS INJURY.

 **CAUTION** Indicates a hazardous situation which, if not avoided, COULD result in MINOR or MODERATE injury.

 **NOTICE** Identifies practices likely to result in product/property damage, such as assembly, installation, etc. that might unnecessarily damage the guard rail.

Employers are responsible for training employees to use the product properly. If you do not understand an instruction, ask your supervisor or employer for assistance, because failure to follow the directions in this manual might result in serious personal injury or even death. Vestil is not liable for any injury or property damage that occurs as a consequence of failing to apply either: 1) the instructions in this manual; or 2) the information provided on labels affixed to the product (if applicable).

Safety Considerations:


-  **WARNING** Improper use might result in death or serious personal injury.
- ONLY use this device to PULL pallets. NEVER use a pallet puller as a below-the-hook lifting device.
 - DO NOT exceed the capacity of the puller.
 - DO NOT use to pull top-heavy or unstable loads.
 - DO NOT pull broken or damaged pallets.
 - Pull ONLY 1 pallet at a time.
 - Make sure both shackle pins are securely fastened to their shackles BEFORE using the puller.

Use Instructions:

1. Grip the stringer (not the deck boards) of a pallet/skid with the jaws of the puller.
2. Attach the chain to a fork truck and slowly drive the truck in reverse. As force is applied, the jaws tightly grip the stringer. Drag the pallet slowly and steadily.
3. When the pallet is in the desired position, i.e. where it can be picked up with your forklift, reverse direction momentarily to produce slack in the chain. Then, open the jaws to release the pallet.

Diagram of Components:

The diagram below pairs names with parts. However, models PAL-12 and PAL-LP have a chain in place of the shackle. Model PAL-12 does not have link arms.

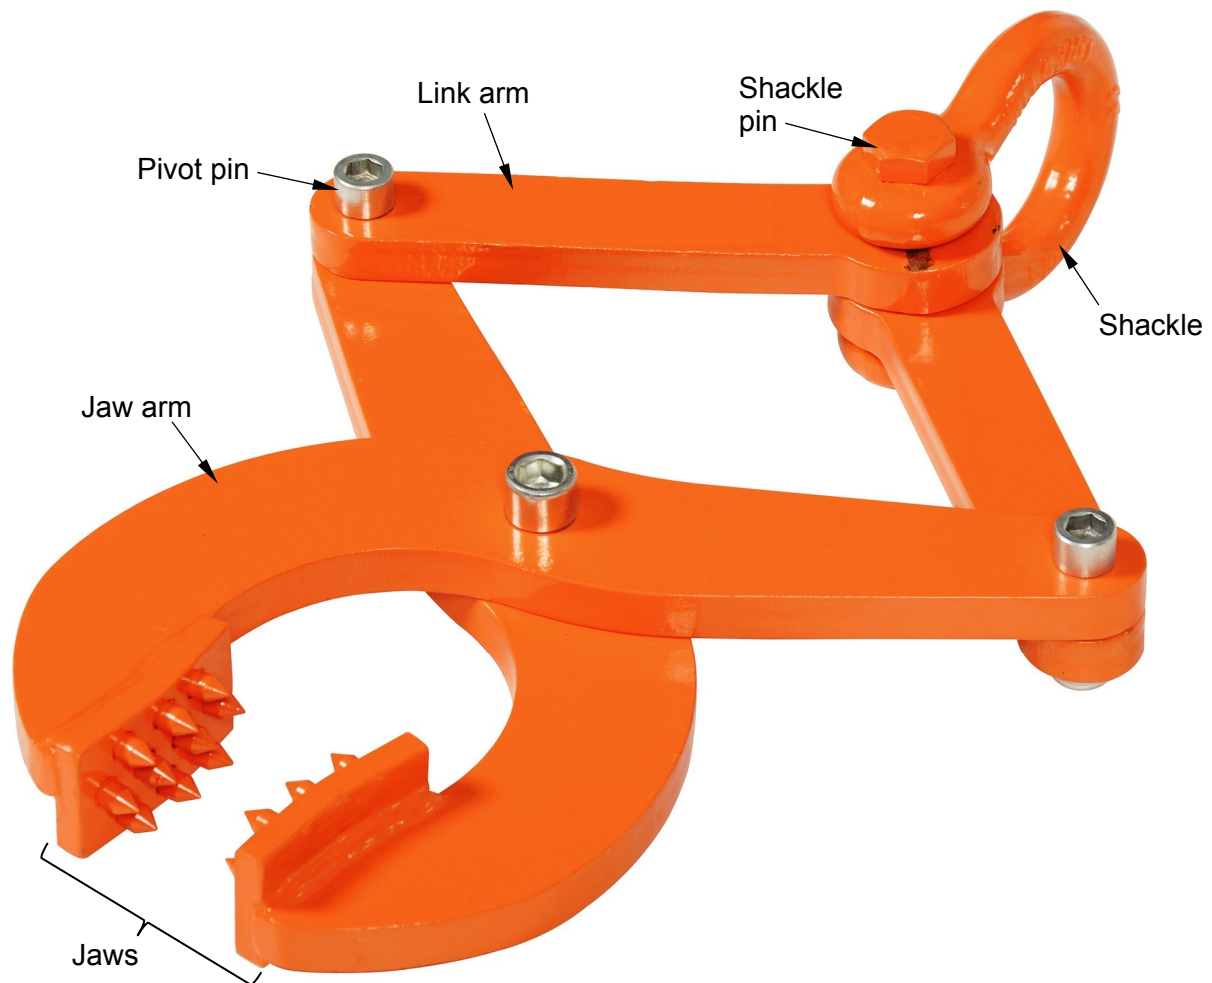

Inspections and Maintenance:

Regular inspections and maintenance are necessary to keep the device in normal condition. *Before* using the puller for the first time, create a written record that describes the appearance of each part. Be certain that your record includes descriptions about pivot points, pins, bolts, and shackles. This written record establishes “normal operating condition”. When conducting future inspections, compare those observations with the written record to determine if a component requires repair or replacement.

Inspect the puller before it is used for the first time. Then, inspect the following at least once per week.

1. Jaw arms and link arms: examine the arms for twisting, bending and warping regions. Pay particular attention to wear at pivot points.
2. Pins, bolts, and nuts: check all bolts and shackle pins for straightness. Shackle pins should be firmly fastened to the shackles.
3. Shackle or chain: inspect for cracks, elongations and deformations.
4. Grippers: confirm soundness of welds to the jaw arms.
5. All components: check for excessive wear.


In addition to inspections, maintain the puller in the following ways:

1. Clean the puller periodically to preserve the paint.
2. Lubricate all pivot points.


Labeling diagrams:

The product must always be labeled as shown in the diagram below. Replace any label that is missing, damaged, or unreadable (e.g. faded).


PAL-12

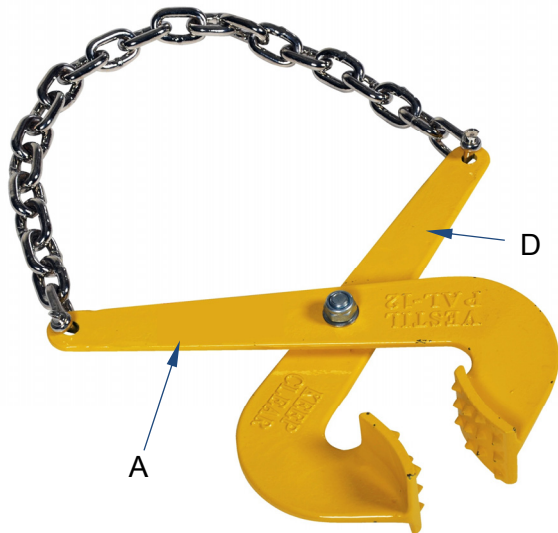

PAL-16

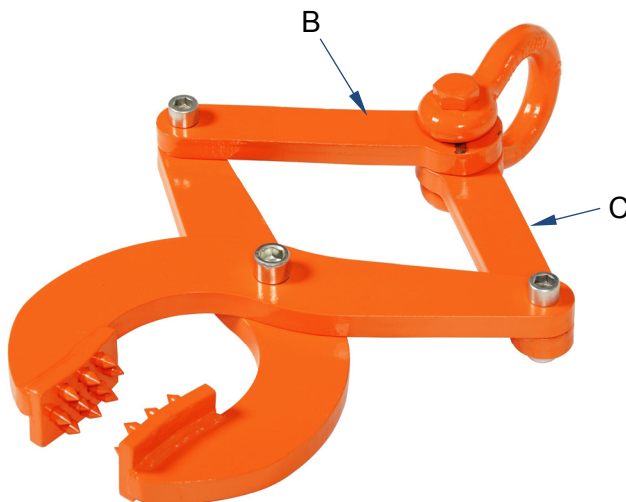

PAL-LP

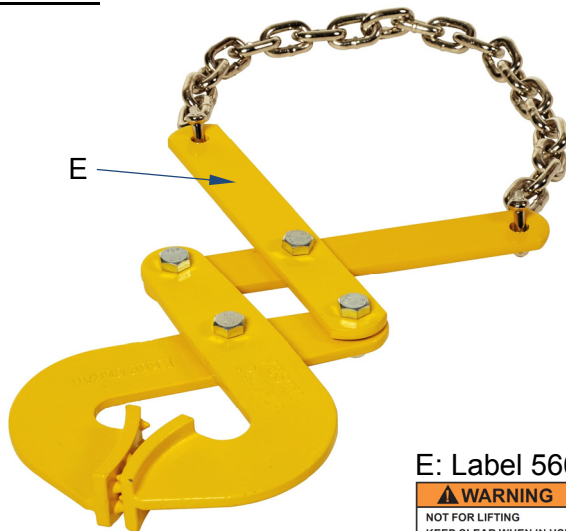

A: Label 987

<p>Model PAL-12 Use with 1/4" GR 30 Proof Coil Chain or Better Rated to pull a 5,000 lbs. pallet across a smooth truck floor Not responsible for misuse</p>	987
<p>PAL-12 Modelo Use con una carrete de cadena resistente de 6.35mm GR 30 or mejor Tasado para empujar un madero de 2268 kgs. a través de un suelo liso de un camión No nos hacemos responsables por el mal uso</p>	
<p>Modele PAL-12 Utiliser avec une chaîne à couronne de 6.35mm GR 30 ou plus Puissance nominale de tirer une palette de 2268 kg. à travers un plancher lisse de camion Fabricant pas responsable au cas d'abus</p>	

B: Label 564

<p>Model PAL-16 • Not Responsible for Misuse</p>
<p>PAL-16 Modelo • No somos responsables por el mal uso</p>
<p>Modele PAL-16 • Nous ne sommes pas responsables de l'usage impropre</p>
564 REV0215

C: Label 563

⚠️ WARNING	⚠️ ADVERTENCIA	⚠️ AVERTISSEMENT
<ul style="list-style-type: none"> • Not for Lifting • Keep clear when in use • Do not use if damaged • Use with 1/4" GR 43 Proof Coil Chain or Better • Rated to pull 6,000 lbs. across a smooth truck floor 	<ul style="list-style-type: none"> • No use para elevar • Mantenga libre cuando se use • No use si esta danado • Use con ua bobina de cadena de 6.35 mm a prueba de GR 43 o mejor • Tasado para arrastrar 2721 kgs. a traves de un suelo liso 	<ul style="list-style-type: none"> • Pas pour soulever • Garder clair quand dans l'usage • Pas l'usage si a endommagé • Utiliser avec 6.35 mm GR 43 chaîne de bobine de preuve ou l'améliorer • A évalué pour tirer 2721 kgs. pallet à travers un plancher de camion lisse

D: Label 988

<p>⚠️ WARNING</p> <p>Material handling is inherently dangerous. To reduce the likelihood that users or bystanders will sustain serious personal injuries.</p> <p>Inspect before each use. DO NOT use if damaged. DO NOT use as a Below-the-hook lifting device.</p> <p>ONLY use to engage and pull 1 pallet at a time. MAX. RATED LOAD = 5,000 lbs. (~2,273kg)</p> <p>⚠️ ADVERTENCIA</p> <p>El manejo de material es intrínsecamente peligroso. Para reducir la probabilidad que usuarios o espectadores sostendrán heridas personales graves.</p> <p>Inspeccione antes de cada uso. NO UTILICE si dañado. NO UTILICE como un "gencho de abajo" que levanta dispositivo. SOLO uso para encajar y tirar 1 paleta a la vez. MAX. lbs estimada=5,000 (~2,273kg)</p> <p>Model/Modelo PAL-12 988</p>
--

E: Label 566

<p>⚠️ WARNING</p> <p>NOT FOR LIFTING KEEP CLEAR WHEN IN USE DO NOT USE IF DAMAGED</p> <p>Use with 1/4" GR 30 Proof Coil Chain or Better Rated to pull a 5,000 lbs. pallet across a smooth truck floor Not responsible for misuse Questions or Instructions Contact:</p> <p>⚠️ ADVERTENCIA</p> <p>NO SE USE COMO ELEVADOR MANTÉNGASE ALEJADO CUANDO EN USO NO USE SI ESTÁ DAÑADO</p> <p>Use con una carrete de cadena resistente de 1/4" GR 30 or mejor Tasado para empujar un madero de 5,000 lbs. a través de un suelo liso de un camión No nos hacemos responsables por el mal uso Preguntas o instrucciones Contacte:</p> <p>⚠️ AVERTISSEMENT</p> <p>NE PAS UTILISER COMME ELEVATEUR VOUS TENIR BIEN À L'ÉCART PENDANT UTILISATION NE PAS UTILISER S'IL Y A DES DOMMAGES</p> <p>Utiliser avec une chaîne à couronne de 6.35mm GR 30 ou plus Puissance nominale de tirer une palette de 2267,96 kg. à travers un plancher lisse de camion Fabricant pas responsable au cas d'abus Pour questions ou instructions veuillez contacter: 566</p> <p>VESTIL MANUFACTURING CORPORATION Angola, Indiana USA • Phone: 260-986-7586 sales@vestil.com • www.vestil.com</p>

LIMITED WARRANTY

Vestil Manufacturing Corporation ("Vestil") warrants this product to be free of defects in material and workmanship during the warranty period. *Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.*

Who may request service?

Only a warrantee may request service. *You are a warrantee if you purchased the product from Vestil or from an authorized distributor AND Vestil has been fully paid.*

What is an "original part"?

An original part is a part used to make the product as shipped to the warrantee.

What is a "proper request"?

A request for warranty service is proper if Vestil receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

<u>Mail</u>	<u>Fax</u>	<u>Email</u>
Vestil Manufacturing Corporation 2999 North Wayne Street, PO Box 507 Angola, IN 46703	(260) 665-1339 <u>Phone</u> (260) 665-7586	sales@vestil.com

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

What is covered under the warranty?

After Vestil receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, Vestil may require you to send the entire product, or just the defective part or parts, to its facility in Angola, IN. The warranty covers defects in the following original dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in original parts that wear under normal usage conditions ("wearing parts"), such as bearings, hoses, wheels, seals, brushes, and batteries.

How long is the warranty period?

The warranty period for original dynamic components is 30 days. For wearing parts, the warranty period is 30 days. The warranty periods begin on the date when Vestil ships the product to the warrantee. If the product was purchased from an authorized distributor, the periods begin when the distributor ships the product. Vestil may, at its sole discretion, extend the warranty periods for products shipped from authorized distributors by up to 30 days to account for shipping time.

If a defective part is covered by the warranty, what will Vestil do to correct the problem?

Vestil will provide an appropriate replacement for any covered part. An authorized representative of Vestil will contact you to discuss your claim.

What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
 - Product misuse;
 - Negligent operation or repair;
 - Corrosion or use in corrosive conditions;
 - Inadequate or improper maintenance;
 - Damage sustained during shipping;
 - Accidents involving the product;
 - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from Vestil. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

Do any other warranties apply to the product?

Vestil Manufacturing Corp. makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.

