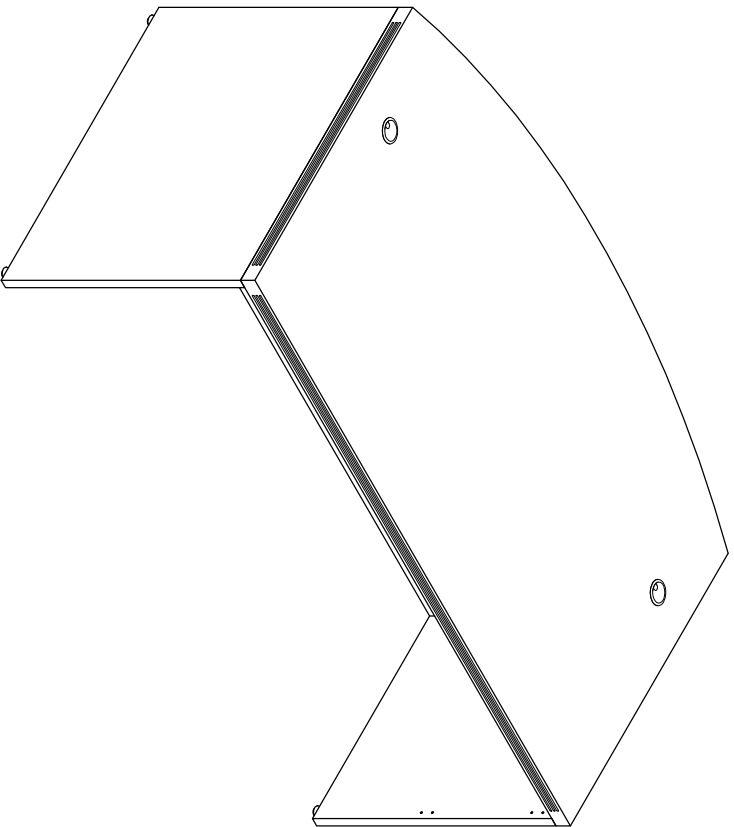


**Aberdeen Series™
Bowfront Desk
Model No. ABD7242**

 

 
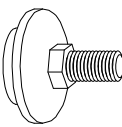

 
 


ASSEMBLY INSTRUCTIONS

CALL 1-800-822-8037 FOR ASSISTANCE

P/N **ABD42** REV 03 02/19/08

PARTS LIST

Name	Part	Qty.	Spare Qty	Name	Part	Qty.	Spare Qty
A	 REALS004 Wood Dowel	10	1	D	 REALS102** Cam Sticker	16	1
B	 REALS003 Cam Post	16	1	E	 REALS067 Leveler	4	
C	 REALS001 Cam Fastener	16	1	F	 REALS100 Grommet	2	
	 ARDHB						

Items with HB are in hardware box.

**Denotes Color Code

PARTS LIST


Name	Part	Qty.	Name	Part	Qty.
G*	ABD~42G** Top	1	J	ARD36J** Right Side Panel	1
H	ARD36H** Left Side Panel	1	K	ARD~K** Modesty Panel	1

*Available in Cherry (LCR) or Mocha (LDC) finish only.
 **Denotes Color Code
 ~Denotes Size (72" or 66")

2

1

Insert Wood Dowels (A) into Modesty Panel (K) and the top of the Side Panels (H, J). Insert Cambs (C) into the Modesty Panel (K) and Side Panels (H, J). Install Cam Posts (B) into threaded inserts in Side Panels (H, J). Install Levelers (E) into bottom of Side Panels (H, J). Attach Modesty Panel (K) to Side Panels (H, J) by turning Cambs (C).

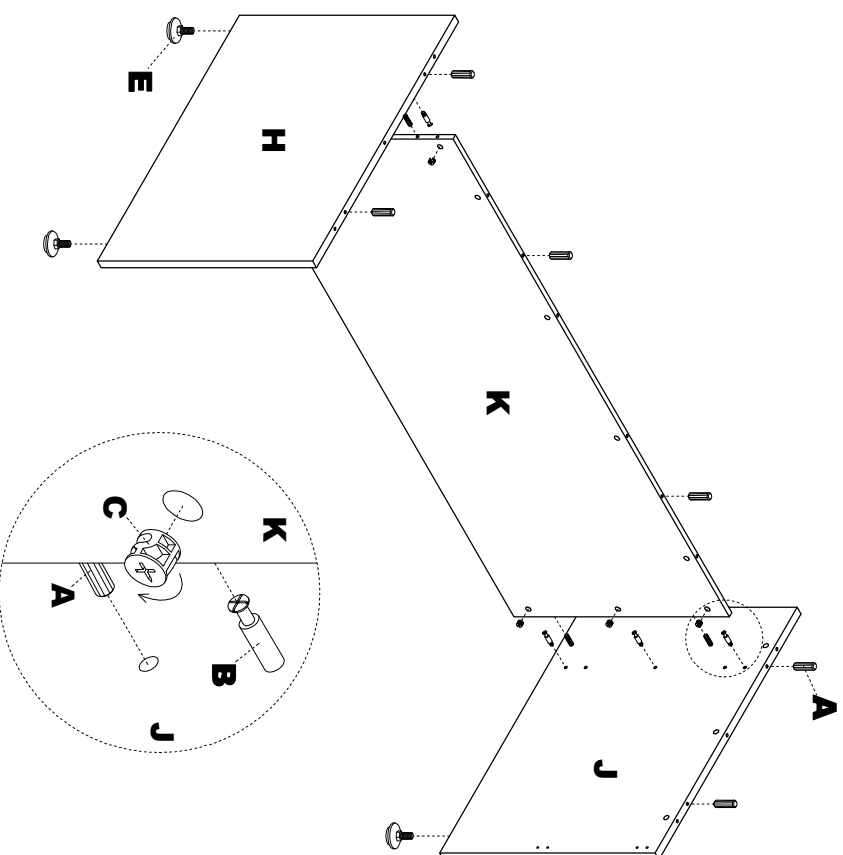


NOTE: The arrow on the face of the Cam (C) should point towards the Cam Post (B) for proper alignment.

3

2


Install Cam Posts (B) into threaded inserts in underside of Top (G).

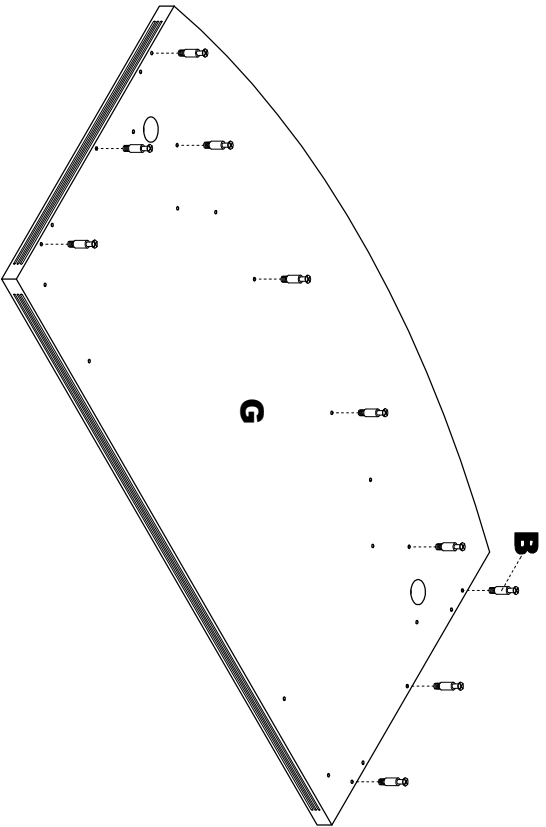

4

3

Place Top (G) onto base and lock in place by turning Cam Stickers (D) onto Cams (C) and insert Grommets (F) into Top (G).

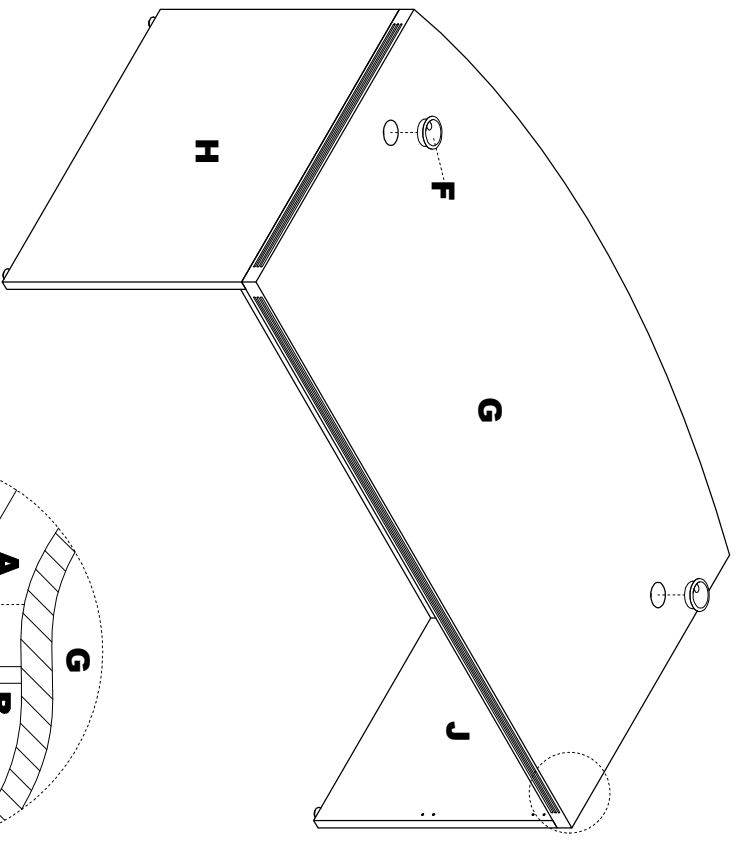

5