

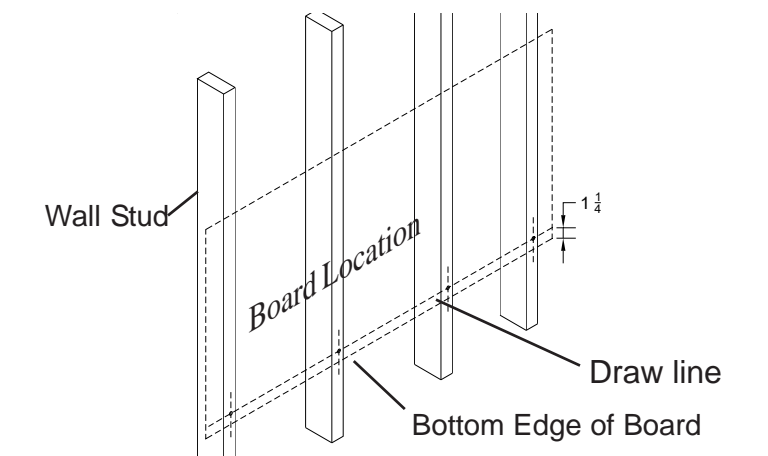



L Clip Install Instructions

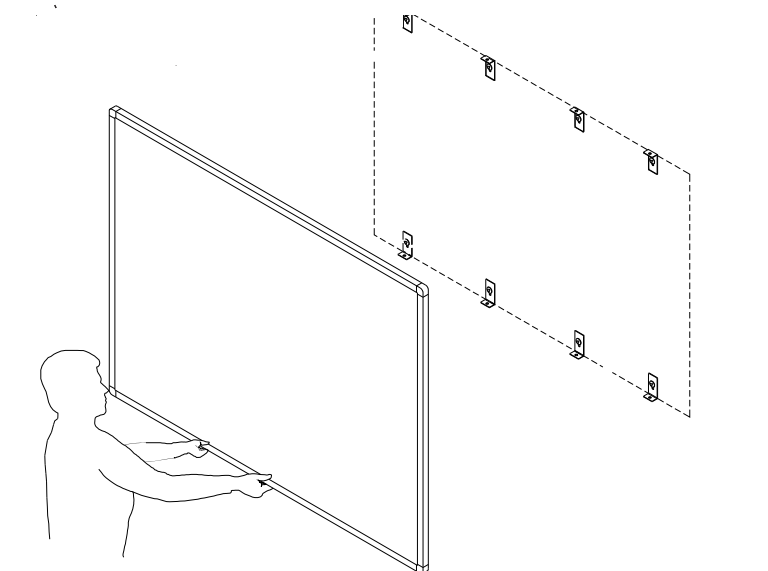

1 Determine board location. Measure from floor to the bottom edge of board. Mark with pencil line the corner location. Measure up from bottom edge of board 1-1/4" and draw line as shown. Locate stud near each end of board and drill pilot holes along line using 1/8" drill bit. See diagram below.

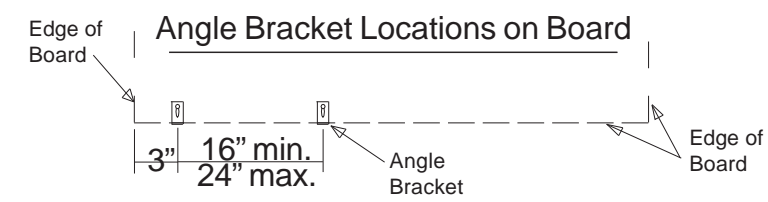


5 Secure top Angle Brackets (A) to the wall using long screws (B) as shown. Follow diagram in Step 1. Set board on the bottom angle brackets.



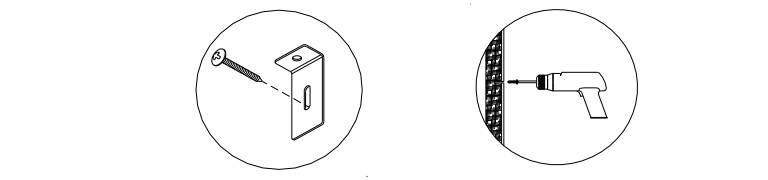


Note:
Install Masonry Anchors (D) into 1/4" Diameter predrill holes for masonry walls.


Install Drywall Anchors (E) into 1/4" Diameter predrill holes for sheet rock walls.

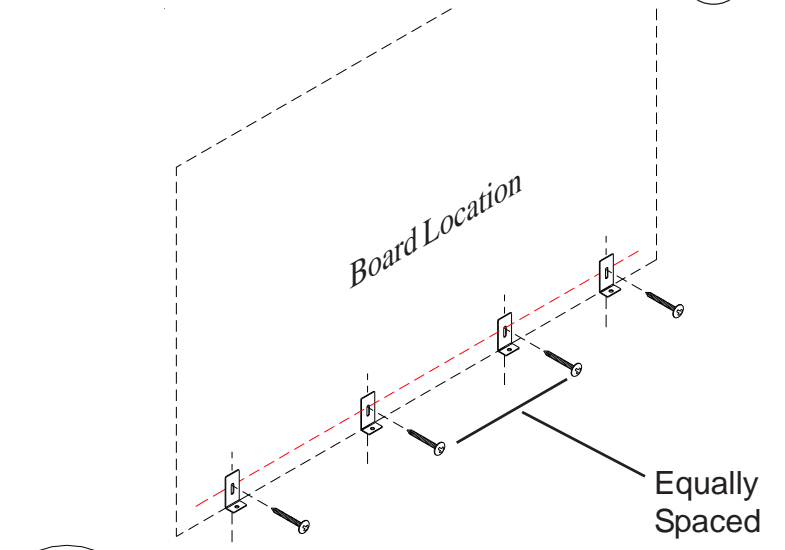


2 Attach 1/2 the # of Angle Brackets using Long Screws (B) as shown.

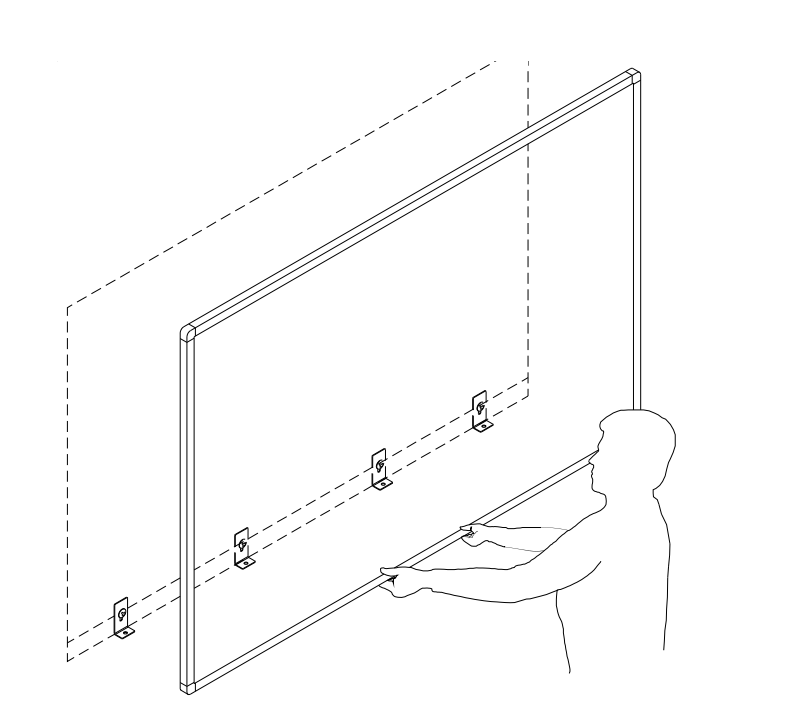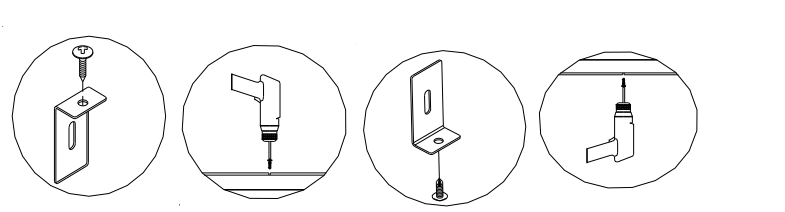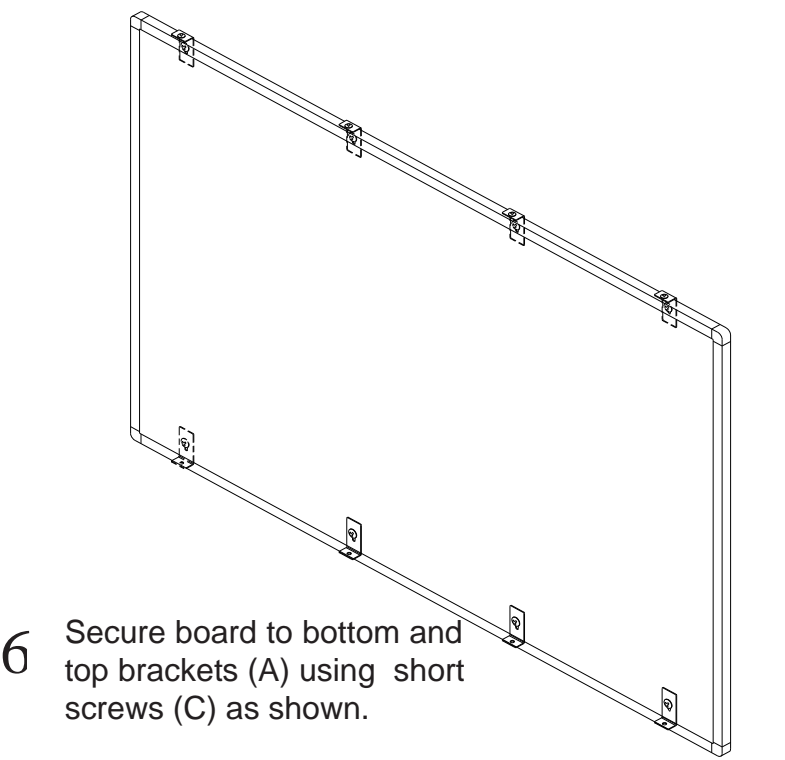

3 Set board on the Angle Brackets. Draw line along top edge of board.

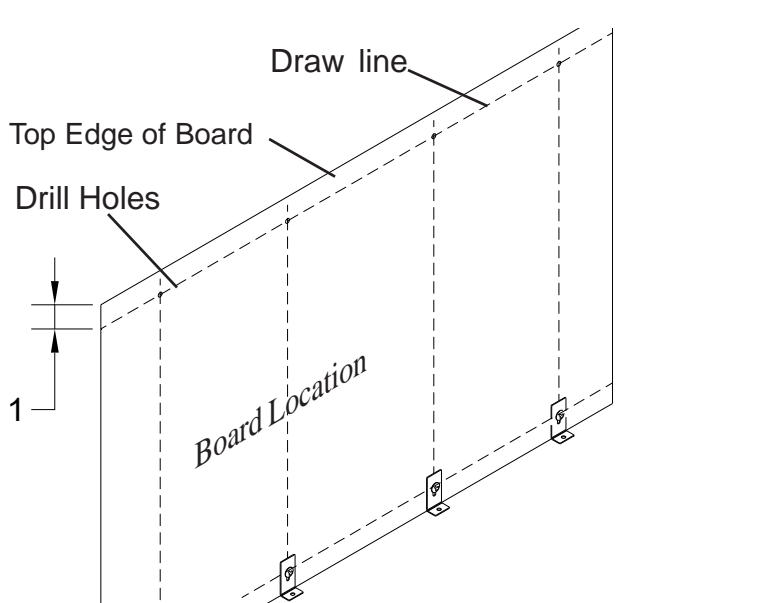

4 Lift and remove board from the angle brackets. Measure down from top line of board 1" and draw line as shown. Locate stud near each end of board and drill pilot hole along line using 1/8" drill bit.

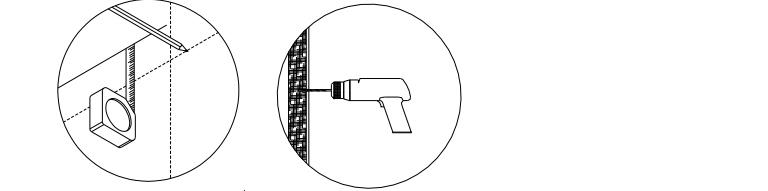

Parts List

P1

Board

Hardware List

A

Angle Bracket

B

Long Screw

C

Short Screw

D

Screw Anchor-Concrete


E

Screw Anchor-Drywall

L Clip Install

Proper L-Clip Layout

Your top and bottom L-Clip layouts should be spaced like this for an 8' wide board.

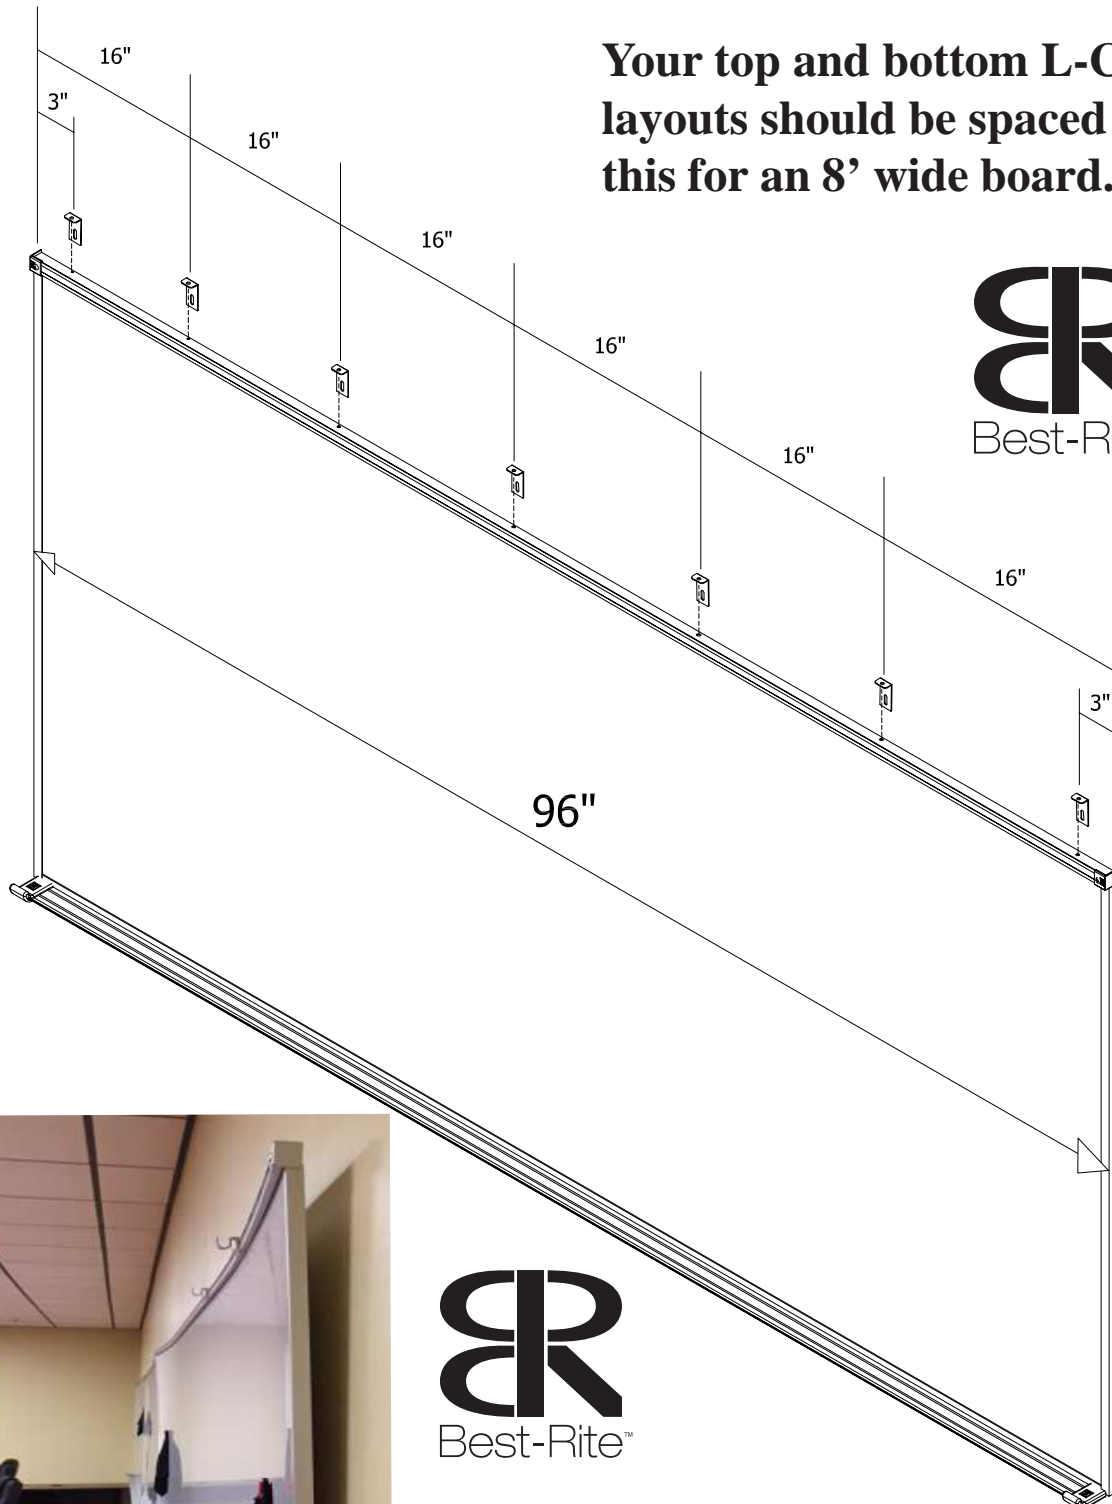

If you don't use this number of L-Clips on top and bottom, your board could end up like this. Please follow these installation directions.