

### SG2029C




PARTS LIST		
Item	Description	Quantity
Ⓢ	Slot Panel - 30" x 22"	2
Ⓣ	Hook Panel - 29.5" x 22"	2
Ⓡ	Rubber Grips - 1"	4

#### Assembly Instructions:

1. Remove protective film.
2. Ensure that the letter marking in the corner is located at the top.
3. Line up holes on the slot panels (S).
4. Insert one hook panel (T) into the slot panel (S).
5. Repeat step 4 with the other hook panel (T).
6. Place rubber grips (R) on the bottom of each panel close to the edges for best stability.

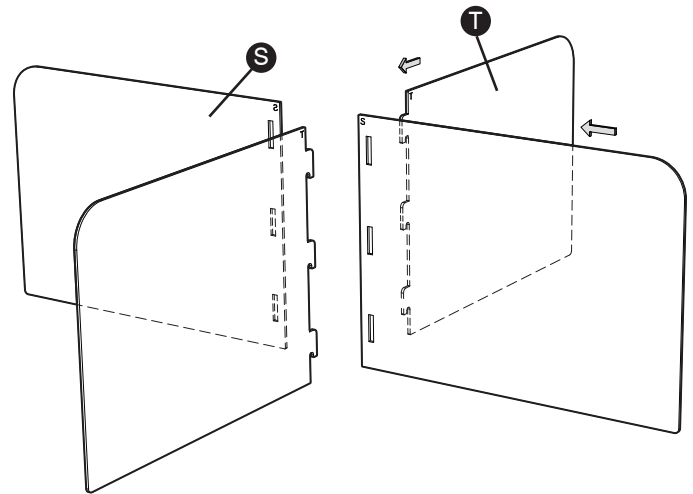

#### Cleaning Instructions:

1. Clean barrier surface with soap and water or disinfectant detergent.
2. Spray detergent on a soft cloth or a microfiber cloth.
3. Apply mild pressure to wipe.

DO NOT USE cleaners or disinfectants containing ammonia, bleach or alcohol; this may cause damage to barrier.

#### Note:

1. More than one person is recommended for assembly.
2. Protective film comes in various materials. Once removed acrylic will be clear.
3. Rubber Grips are small and are a choking hazard.

Video Instructions located here  
<https://youtu.be/arGzdsbmx0>  
or by following the QR Code below

