
TUFF GUARD SAFETY RAILING

INSTALLATION INSTRUCTIONS

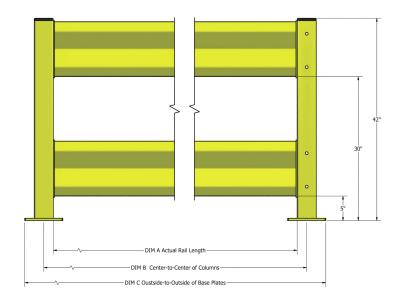



TOOLS REQUIRED

8

MANUFACTURING

- Hammer
- Chalk string
- Two ¾" wrenches
- 5/8" concrete drill bit
- Hammer drill

HARDWARE REQUIRED

- (1) SRTFAST per rail
 Includes: 4 ea: 1/2-13 x 5 1/2 HH Cap Screw; pltd; grd 5
 8 ea: 1/2 in SAE pldt washer with 1 1/16 OD
 4 ea: 1/2-13 H Nut; pltd.
- (1) SRPFAST per post Includes: 4 ea. 5/8 x 4 1/2 concrete wedge anchors 4 ea. washers 1 5/16 OD 4 ea. nuts

STEPS:

- 1. Pop a chalk line defining the post baseplate edge, 12" from the equipment you wish to protect.
- 2. Lay out the posts and rails.
- 3. Bolt the rails to the posts and tighten.
- 4. Once rails are attached to the posts make sure the posts are straight and anchor them.



(800) 433-2212 • Fax (817) 293-7570 9201 South Freeway • Fort Worth, TX 76140 www.bluffmanufacturing.com