


Table Desk 30"/36"Deep Tops, w/o Casters Aberdeen Model No's. ABTDS60/66/72 Medina Model No's. MTD63/72

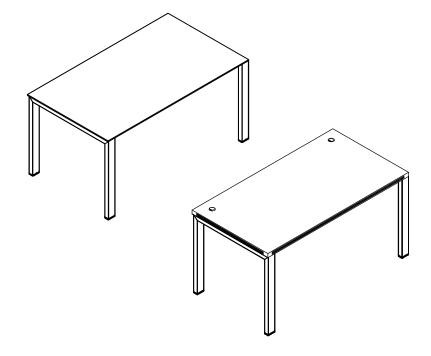

ASSEMBLY INSTRUCTIONS
CALL 1-800-822-8037 FOR ASSISTANCE


PARTS LIST


Name	Part	Qty.	Spare Qty
A	M8x25 Cap Screw	4	
В	HB Bushing-Upper	4	
C	HB © © Bushing-Lower	4	
D	Clip- Top Mounting	4	

Name	Part	Qty.	Spare Qty
E	Allen Wrench 5mm	1	
F	Allen Wrench 6mm	1	
G	Clip Screw 5x25mm	8	1
	ABTDBHB		

Items with HB are in hardware box.

PARTS LIST

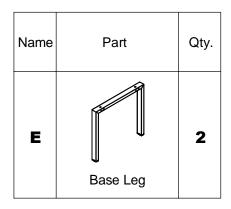

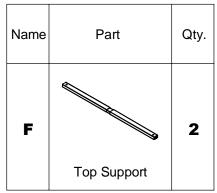


IMPORTANT!


Review ALL instructions before beginning assembly.

These instructions are provided to avoid problems that may occur from improper assembly or installation. National Business Furniture and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.

 $(\mathbf{1})$ Insert Top Supports (F) into Base Legs (E). **(2**) Attach Top Supports to Legs by placing Lower Bushing (C), Qty 1, into hole on the bottom of the Leg and Upper Bushing (B), Qty 1, into hole on the Top of the Leg. Using Cap Screw (A), Qty 1, and 6mm Allen Wrench (F), fasten Legs and Supports together. Repeat for each corner.

2



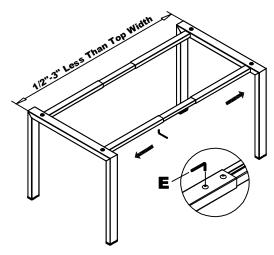

Place Top (Seperate Carton) upside down on a clean, flat surface. Attach Top Mounting Clips (D), Qty 4, to underside of top at pre-drilled hole locations using Screw (G) Qty 8.

