




C51200 ASSEMBLY INSTRUCTIONS


PARTS:

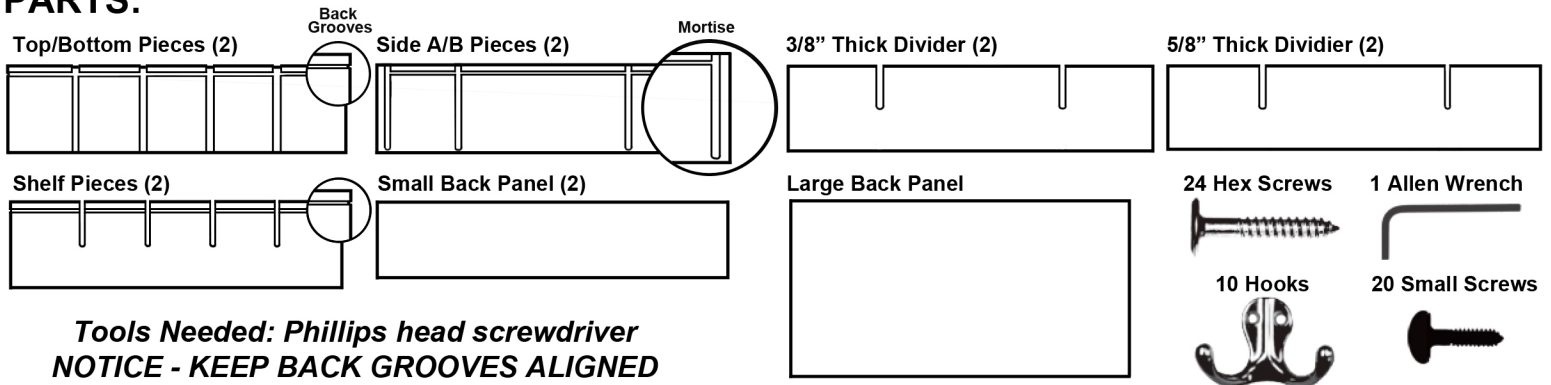


Tools Needed: Phillips head screwdriver
NOTICE - KEEP BACK GROOVES ALIGNED

DO NOT DRILL


Step 1: Attach hooks to the divider pieces by using small screws into the pre-drilled holes before assembling the unit. Make sure the hooks are pointed upwards toward the shortest end of the divider panel.

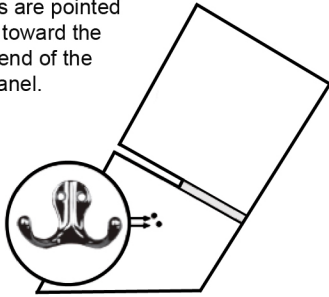


Step 2: Insert edge of the **Bottom Piece** into the mortise of **Side A**, make sure the back grooves are aligned. Place a hex screw into each of the (2) pre-drilled holes in **Side A** and tighten down half way.

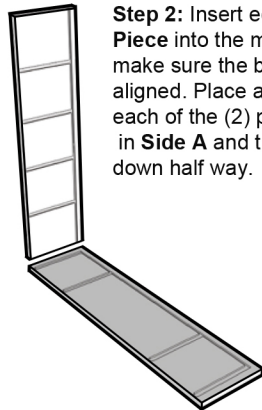


Step 3: Insert edge of one of the **5/8\"**

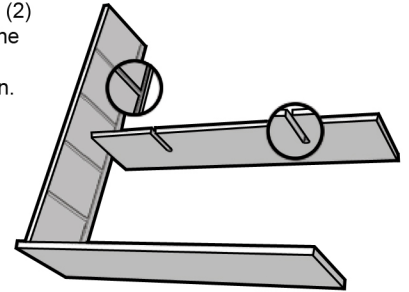


Step 4: Insert edge of other **5/8\"**

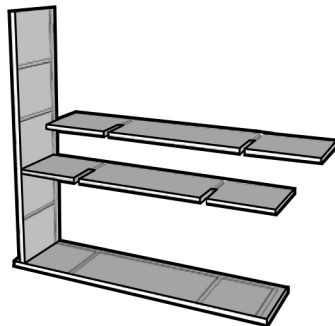


Step 5: Insert edge of one of the **3/8\"**

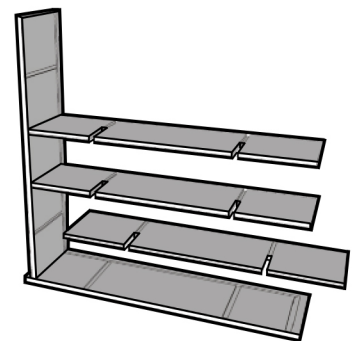

Step 6: Insert edge of the final **3/8\"**

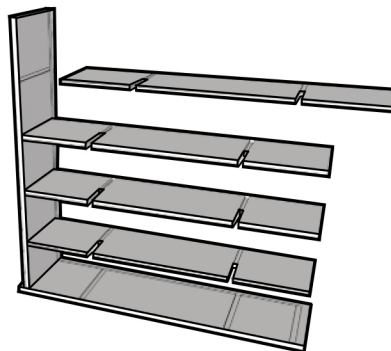


Step 7: Insert **Bottom Shelf** parallel to the **Bottom Piece**, fitting the grooves of the **Bottom Shelf** into the grooves of the dividers. Make sure the back grooves are aligned. Edge of shelf should be inserted into the mortise of **Side A Panel**. Insert hex screws into (2) pre-drilled holes in **Side A Panel** and tighten down half way.

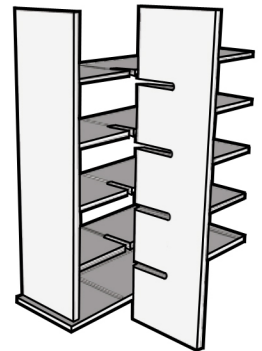


For Assistance, Call: Customer Service 1-800-247-8465




C51200 ASSEMBLY INSTRUCTIONS

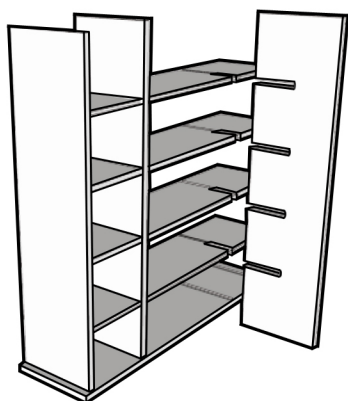

Step 8: Insert **Top Shelf** parallel to **Bottom Shelf**, fitting the grooves of the **Top Shelf** into remaining grooves of dividers. Make sure back grooves are aligned. Edge of shelf should be inserted into remaining mortise of **Side A Panel**. Insert hex screws into (2) pre-drilled holes in **Side A Panel** and tighten down halfway.

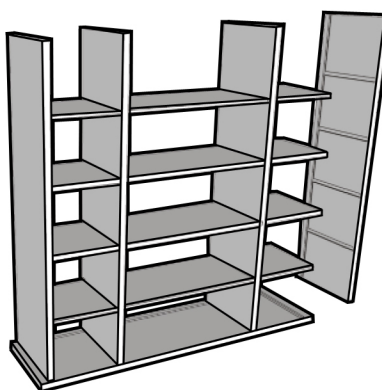


Step 9: Insert edge of **Top Piece** into remaining mortise of **Side A Panel** while aligning the back grooves. Insert edges of each divider into the corresponding mortise on **Top Piece**. Insert hex screws into (4) pre-drilled holes of the **Top Piece** and tighten down half way.

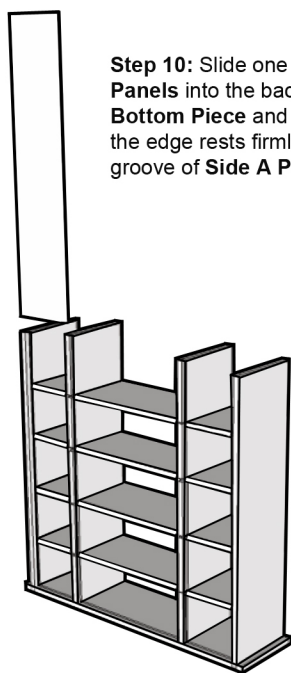


Step 10: Slide one of the **Small Back Panels** into the back grooves of the **Bottom Piece** and **Bottom Shelf** until the edge rests firmly in the back groove of **Side A Panel**.




Step 11: Slide **Large Back Panel** into the back grooves of the **Bottom Shelf** and **Top Shelf** until the edge rests firmly in the back groove of **Side A Panel**.

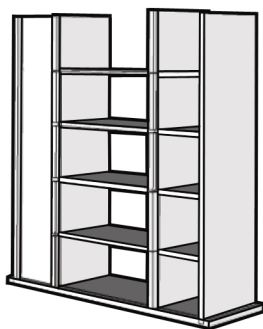

Step 12: Slide remaining **Small Back Panel** into the back grooves of **Top Piece** and the **Top Shelf** until the edge rests firmly in the back groove of **Side A Panel**.

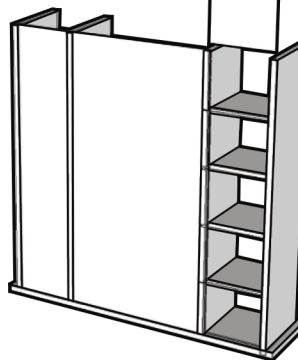


Step 13: Fit **Slide B Panel** over edges of the assembled pieces, inserting edges of **Bottom Piece**, **Bottom Shelf**, **Top Shelf** and **Top Piece** into mortises of **Side B Panel**. Make sure that the back panels fit into the back grooves of **Side B Panel**. Insert hex screws into each of (8) pre-drilled holes on **Side B Panel** and tighten down halfway.

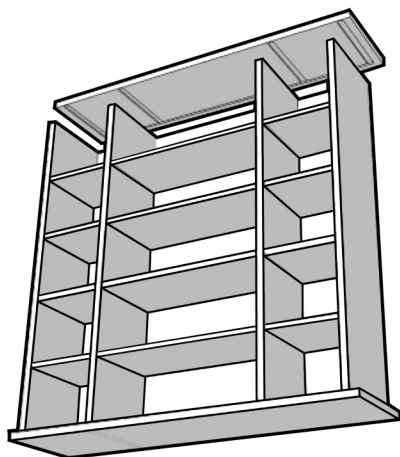

Step 14: Finish tightening all hex screws.

DO NOT OVER TIGHTEN.

Stand unit upright so that it is resting on the **Bottom Piece** and the edges of **Side A Panel** and **B**. Assembly is complete.

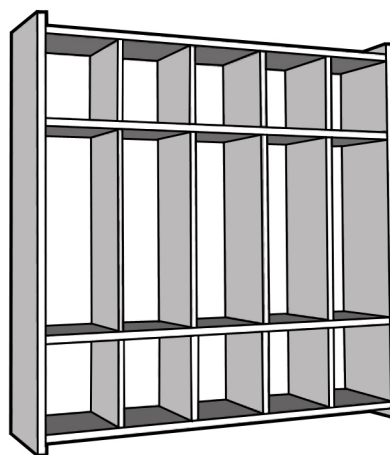

For Assistance, Call: Customer Service 1-800-247-8465